

User manual

---

C.1

Vibrator

---


Laid™

---

Bedienungsanleitung  
Guide d'utilisation  
Manual del usuario  
Manual para assegurar  
Manuale dell'utente  
Руководство  
пользователя

---

## C.1 Vibrator

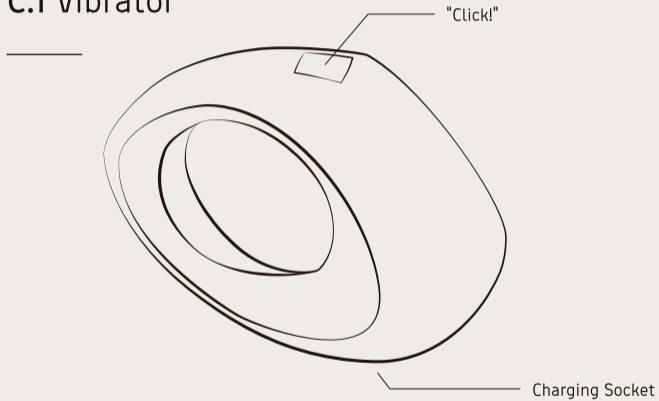

Thank you for purchasing the C.1 Clitoral Vibrator from Laid. We wish you many wonderful moments of thrills and joy!

Before you start, we request that you spend a little time reading this user manual to ensure you get all the necessary information regarding the safe and pleasurable use of the C.1.

## I. In the box...

...you will find the C.1, charging cable with USB plug and user manual.

## II. About the C.1

The rechargeable and waterproof C.1 from Laid has 2 vibration speeds and 1 powerful pulsation mode. The surface areas and angles of the C.1 combine with the ring to provide a multitude of ways in which to stimulate the clitoris and surrounding areas.

### III. Important safeguards

READ ALL INSTRUCTIONS BEFORE USING. DO NOT DISCARD THESE INSTRUCTIONS.


The C.1 is not a children's toy. The C.1 is intended for adult use and play only.

#### WARNING!

To reduce the risk of electrocution, burns, fire, dangerous electric shock or injury:

1. DO NOT place or store the C.1 or its charger in water or any other liquid.
2. DO NOT reach or touch the charger if it has fallen into water or any other liquid. Unplug it immediately from the electrical outlet or computer.
3. DO NOT use a power adapter other than the charging cable and adapter that was included with the C.1.
4. DO NOT attempt to use the C.1 whilst charging.
5. DO NOT attempt to charge the C.1 in any other manner, but with the included charger.
6. DO NOT plug the charger into an incorrect voltage source outlet. For correct voltage specification refer to the wall plug label.
7. DO NOT use with voltage converters.
8. DO NOT force the wall or USB plug into an electrical outlet or USB port of a computer.
9. DO NOT use the charging cable, USB or adapter plug if it is damaged in any way.
10. DO NOT place the charger where it could fall into water or any other liquid, such as a sink, bathtub or toilet.
11. DO NOT plug the charging chord into the C.1 when wet or when your hands are wet.
12. DO NOT CLEAN the C.1 when it is being charged.
13. DO NOT CLEAN the charging chord when connected to an electrical outlet or to a computer.
14. ALWAYS ensure the C.1 is completely dry when plugging the charging chord in it.
15. ALWAYS connect the charger to a properly grounded electrical outlet.
16. DO NOT charge the C.1 outdoors.

17. DO NOT operate or charge the C.1 when aerosol products are being used, or where oxygen is being administered.
18. USE the C.1 only in accordance with these instructions.
19. DO NOT attempt to dismantle or otherwise tamper with the C.1 or any of its components. Doing so may result in injury and void your warranty.
20. DO not use the charger if the charging chord or power supply is damaged, or if the C.1 is not functioning properly.
21. NEVER operate the C.1 if it has been dropped or damaged.
22. NEVER use the charging chord, if it has been dropped, damaged, exposed to water or are not working in any way.
23. DO NOT dispose of the C.1, the charging chord or any of its components in a fire.
24. ALWAYS dispose of the C.1, its battery, the charger and chord properly. Do not incinerate. Battery may explode if overheated. Do not wrap them in metal or aluminum foil. Wrap them in newspaper before discarding.
25. DO NOT disassemble, crush or puncture the Lithium-ion battery, or allow metal objects to contact the battery terminals.
26. Keep the C.1, charging chord and plugs and any of its components away from heated surfaces.
27. ALWAYS unplug the charger/charging chord from the electrical outlet/computer when not in use.
28. DO NOT drop the C.1. This could cause irreparable damage to it and void your warranty.
29. DO NOT place the C.1, or any part of the charging chord in a dishwasher while in use or for cleaning.
30. DO NOT operate the C.1 under a blanket or pillow or other protective layers to prevent risk of excessive heating and possible fire, electric shock injury to persons.
31. DO NOT leave the C.1 unattended on any surface while it is operating.
32. DO NOT use the C.1 for any other purpose than is described in this user manual.
33. AVOID leaving the C.1 or its charger in direct sunlight and NEVER expose to extreme heat.
34. DO NOT TAKE THE C.1 into the sea/salt water, only in fresh water.
35. DO NOT submerge in water deeper than 1 meter/3 feet.

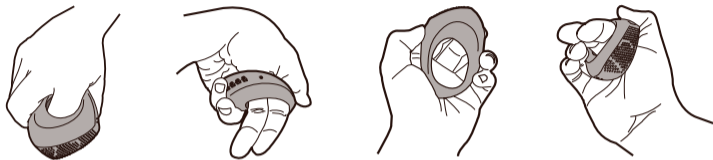

## The C.1 Clitoral Vibrator from Laid

---

The rechargeable and waterproof C.1 from Laid is one of the most versatile clitoral vibrators in the world. It has 2 vibration speeds and 1 powerful pulsation mode. It is however the shape and design of the C.1 that truly add to its versatility.

The surface areas and angles of the C.1 combine with the ring to provide a multitude of ways in which to stimulate the clitoris and surrounding areas.

Pressing one side of the C.1 against the clitoris, ring pointing down, you stimulate the clitoris whilst the vibration carries through the ring along the sides of the labia and around the vaginal opening.

The ring makes it easy to hold in whatever position you prefer. You can vary the feel of the vibration by altering the angle at which you hold it.

Of course you can also hold the larger part and use the ring for more pinpointed stimulation.

The studded pattern on the top of the C.1 amplifies the sensation of vibration when held lightly against the skin or provides proper friction when rubbed against it.

Finally, placing a finger or two through the center of the C.1 allows for penetration whilst stimulating the clitoris. Or if you like, a dildo (for example Laid's D.1 Silicone Dildo).

And there you have it, the most versatile clitoral vibrator right at your fingertips.

# Simple guide to using the C.1 successfully

---

## 1. MAKE SURE IT'S CLEAN

Wipe the C.1 clean with a damp cloth using mild soap and warm water. After cleaning, make sure it is completely dry before charging it.

## 2. MAKE SURE IT'S CHARGED

Charging the C.1: Plug one end of the USB charger chord into the C. 1 and the other one into the USB-adapter or to a computer using only the USB cable.

A light will flicker every 0.5 second when charging, when it stays on, it's fully charged.

You can recharge the C.1 after any amount of use (no need to deplete the battery completely). As an added feature the light will flicker 5 times every 2 seconds when the battery is low (at 5% capacity or less) It will do so also in in standby mode.



\*First time charging: Charge the C. 1 for until 0 0 the light is constant. Always disconnect the charger from its power supply when not charging.

### 3. LET THE FUN BEGIN – OPERATING THE C.1

To turn on and off: Press the button and hold it in for 2 seconds to turn on. The C.1 starts automatically at the lowest level of vibration, level 1. To turn off, press and hold the button in for 2 seconds.

Switching settings: From level 1 vibration, press the button once (do not hold in.) to go to the next level of vibration, level 2. Press once more to go to pulsation. Press yet again and you are back at the level 1.

# Troubleshooting

---

The button does not blink when the C.1 is charging.

- The C.1 is fully charged
- The USB cable is not completely plugged in to either the C.1 or the country specific adapter. Check charging chord is connected properly in both ends.
- The adapter plug is not properly connected. Check wall and DC sockets or, if charging via computer, check that the USB port on computer and that computer is connected.

The C.1 does not activate when the button is pressed and held in.

- Battery is empty. Recharge the C.1

The button starts flickering in intervals when the C.1 is in standby mode.

- Signals the C.1 is low on battery and should be recharged. Blinking will stop when battery is completely empty.

## Care and cleaning

---

Clean after every use with mild soap and water. Air dry or wipe with a cotton cloth. Store in the charging case to keep the C.1 clean and safe.

## Battery disposal

---

The C.1 contains a rechargeable battery. Please do not dispose of this product with normal household waste. Please dispose of this product at the appropriate electrical and electronic equipment recycling/disposal locations in accordance with government regulations.



## Specifications

---

Waterproof, submersible to 1 meter/3 feet.

Materials: 100% Body-safe silicone  
and ABS

Weight: 70 gr/2.50 Oz.

Battery: Lithium-ion

Charging: 120 minutes

User time: Up to 110 minutes

Standby-time: 90 days on full charge

## Disclaimer

---

Users of the C.1 use it at their own risk. Laid does not assume any responsibility or liability for the use of the C.1.

# Warranty

---

Laid warrants this product for a period of one (1) year, from the date of original purchase, against defects due to faulty workmanship or materials. In the event that this product fails during the warranty period Laid warrants that this product, intended for adults only, is free from defects in workmanship and materials under its intended use. The warrant is for a period of 1 (one) year, or longer in countries that mandate a longer warranty time. It does not cover deterioration caused by fair wear and tear or damage caused by accident, misuse or neglect. Any attempt to open or take apart this product or its accessories will void the warranty. In the event of a breach of the foregoing warranty, Laid's sole obligation is limited to, at Laid's option, replacing the product in question. The conditions are that you have notified Laid within the warranty period, that you provide reasonable evidence that your date of claim is within the warranty period, and that you have been authorized to return the product. The issued Return Merchandise Authorization number, also called an RMA, must accompany the returned product and carriage paid. Shipping costs are non-refundable. This comes in addition to and does not affect your consumer statutory rights in any way. If you experience any problems with your product, have any questions regarding its operation or believe you are eligible for a warranty claim, please contact Customer Services at [get@laid.com](mailto:get@laid.com)

# About Laid

---

Laid designs and develops sensual and refined sex toys of superior quality and function for men, women and their partners. The Laid brand signifies edge, ease and performance. From the first time you lay your eyes on it, to the wonderful moments of discovery and thrills that follow, you will find that your Laid product delivers on all three and invites to further play.